



GENUINE ACCESSORIES
INSTALLATION INSTRUCTIONS

PART NUMBER:
0000-8K-R01

CARGO NET

APPLICABLE MODELS:
2013 > MAZDA CX-5

PACKAGE CONTENTS

Cargo Net

TOOLS REQUIRED

None

1 Installing Net

1. Open lift gate.
2. Locate the two mounting locations on the passenger side of the vehicle as indicated by the arrows (Fig. 1).
3. Repeat for the driver's side of the vehicle.

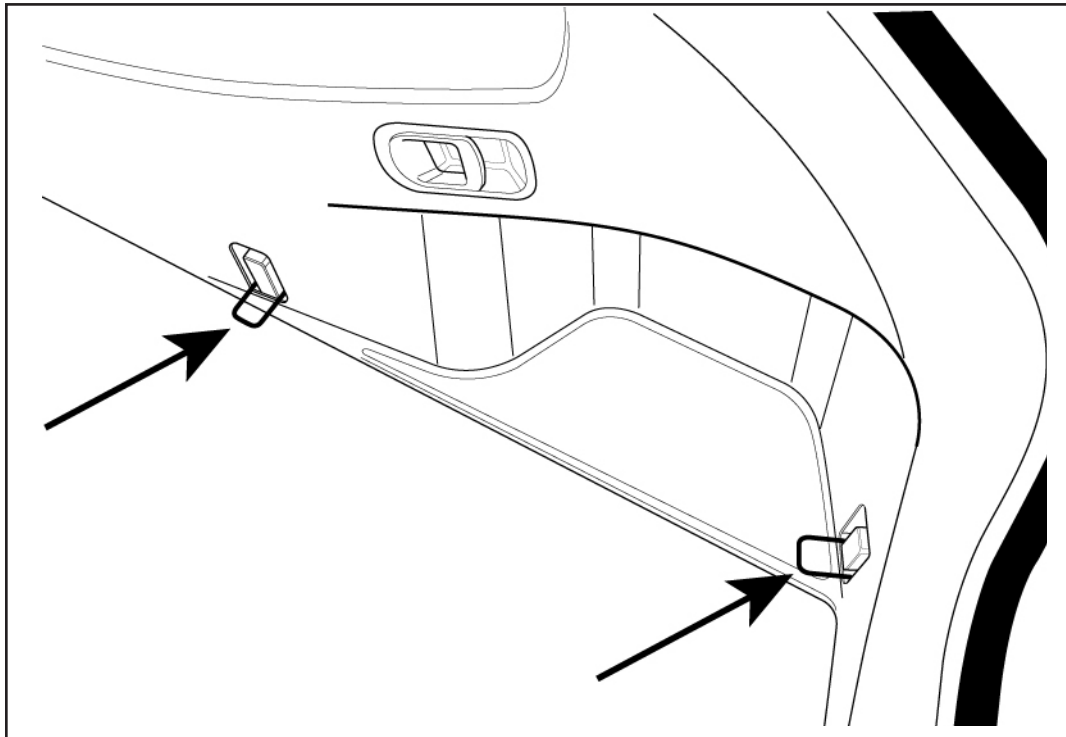


Fig. 1

2 Installing Net - (Cont.)

4. Attach the front hook to the front ring and repeat for the other side of the vehicle (Fig. 2).
5. Attach the rear hook to the rear ring and repeat for the other side of the vehicle (Fig. 3).
6. Confirm the completed assembly (Fig 4).

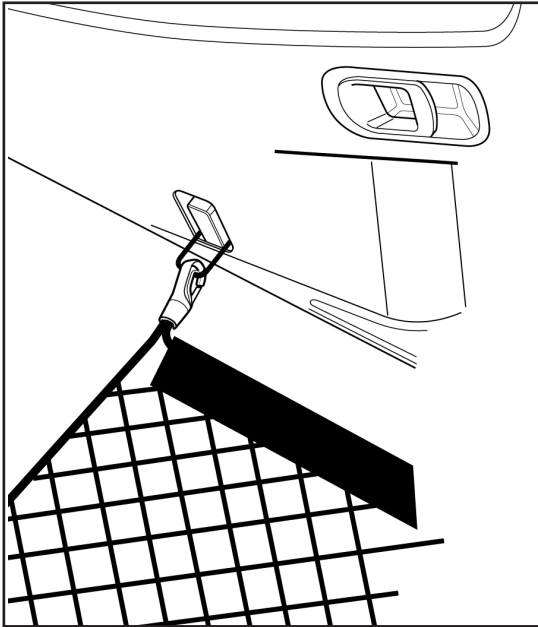


Fig. 2

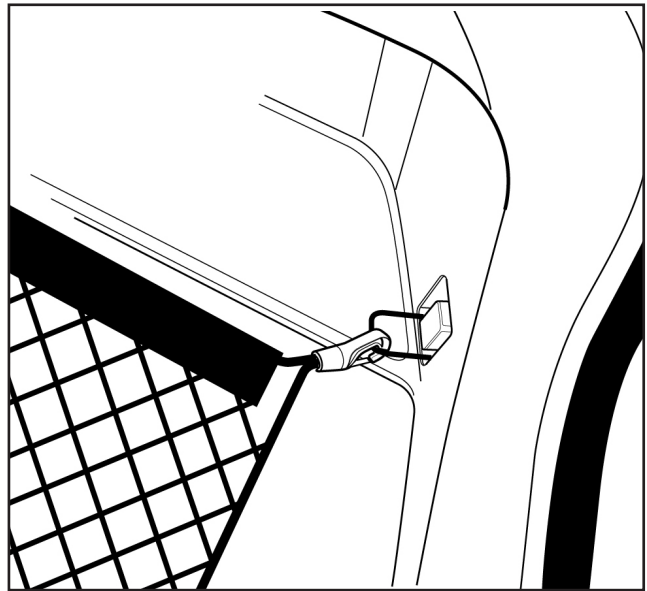


Fig. 3

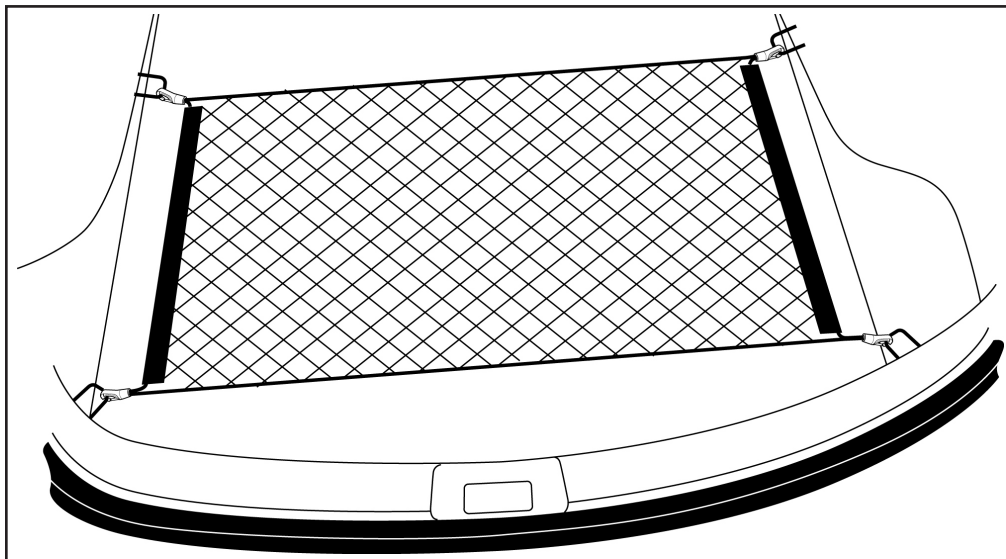


Fig. 4