GENUINE CARGO STORAGE SHELF

INSTALLATION AND USER'S INSTRUCTIONS

Thank you for purchasing a Genuine Mazda Accessory.

Before removal and installation, please thoroughly read these instructions.

For your safety, please read the contents of this booklet to properly install and use the cargo storage shelf kit. Keep these instructions with your vehicle records for future reference.

- •There are several (A) WARNING and (A) CAUTION sections in this booklet concerning safety when installing the cargo storage shelf. Always read and follow the instructions in order to prevent injuries, accidents, and possible damage to the vehicle.
- \triangle WARNING: Indicates a situation in which serious injury or death could result if the warning is ignored.
- ▲ CAUTION: Indicates a situation in which bodily injury or damage to the vehicle could result if the caution is ignored.
- Do not modify the cargo storage shelf.
- Do not install the cargo storage shelf in any way other than described in the following instructions.
- If in doubt, please contact your Mazda dealer to install the accessory in order to prevent errors in installation.
- If you have any questions about the use of the accessory, ask your Mazda dealer for proper advice before using it.
- Mazda and its suppliers are not responsible for injuries, accidents, and damage to persons and property that arises from the failure of the dealer or installer to follow these instructions.
- To ensure safety and reliability of the work, installation, removal and disposal work must be carried out by an Authorized Mazda Dealership.
- Be careful not to lose removed parts, and be sure that they are kept free of dirt, scratches, or damage.

PART NAME: PART NUMBERS: VEHICLES: CARGO STORAGE SHELF 0000-8B-R25 MAZDA CX-5


– NOTE –

- To the dealer
- Please turn over these instructions to the customer after installation.
- To the customer
- Keep these instructions after installation. The instructions may be necessary for installing other optional parts or removal of this accessary.
- Should the vehicle or this accessory be resold, always transfer these instructions to the next owner.






INSTALLATION INSTRUCTIONS

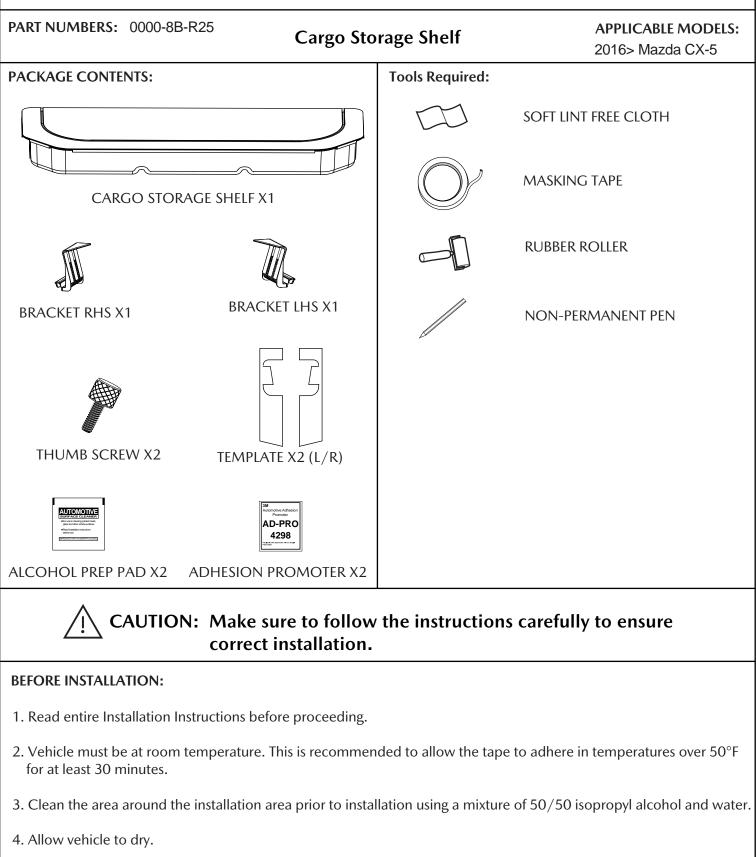


1. Position Side Templates: (RHS Shown, identical steps apply for LHS)

- A. Open lift gate/trunk.
- **B.** Fold the die cut templates at the dotted lines.
- C. Place the die cut templates into position at the rear quarter panel, aligning to the hole (Figure 1).
- **D.** Tape templates into place (Figure 2).

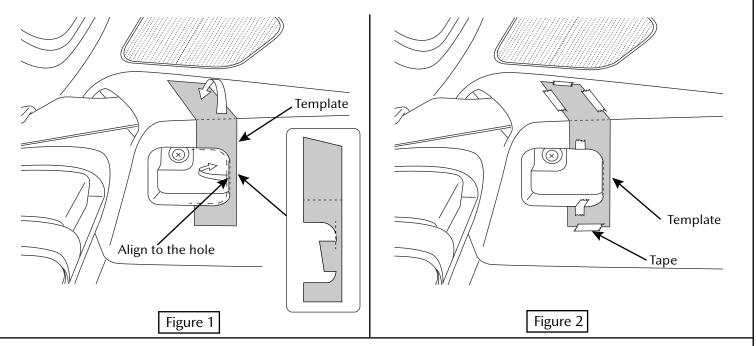


2. Prepare Surface:

- A. Trial fit the side bracket and align with the template. Mark the bracket perimeter with non marking pen (Figure 3).
- B. Mask the area with painters masking tape on the outside of the marked line (dotted line) (Figure 4).
- **C.** Clean the tape attachment areas on the rear quarter panel as shown, thoroughly with the alcohol prep pad provided and allow to dry.
- **D.** Apply adhesion promoter directly onto the tape attachment areas of the surface (Figure 4).
- **E.** Allow promoter to dry for 90 seconds.

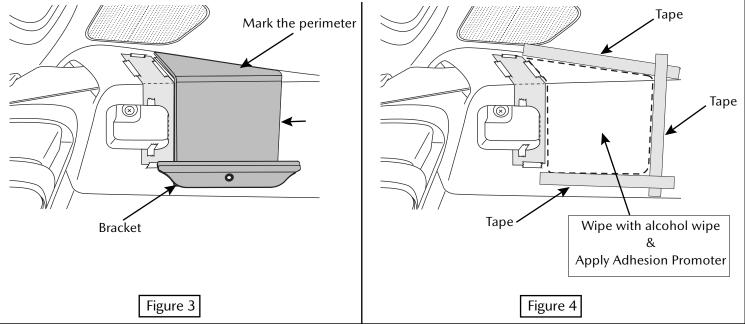


3. Prepare Cargo Storage Shelf Brackets: (RHS Shown, identical steps apply for LHS)


- **A.** Peel back the red tape liner from each of the tape section and fold at 45 degrees, approximately 50mm (2") outside of the cargo storage shelf bracket.
- **B.** Fully remove the red tape liner from the top surface (Figure 5).
- C. Do not touch the exposed surface of the adhesive tape.

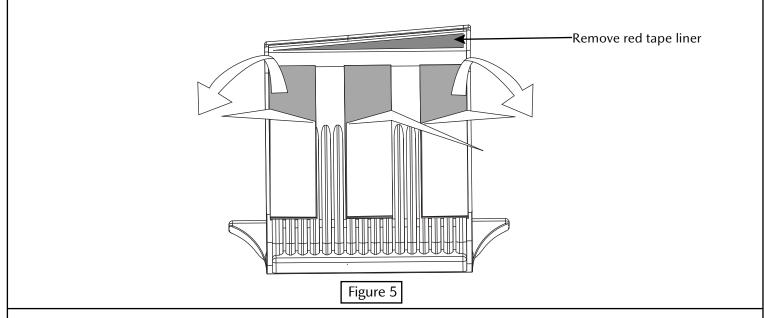

4. Trial and Fit Cargo Storage Shelf Brackets:


- A. Trial fit the Cargo Storage Shelf Brackets by aligning the bracket with the die cut templates. Ensure that the adhesive tape does not overlap the die cut templates.
- **B.** Align the top of the Cargo Storage Shelf Brackets to the panel surface first (Figure 6).
- **C.** Apply light pressure to the tape areas (Figure 7).
- **D.** Peel the red liner tapes away from behind.

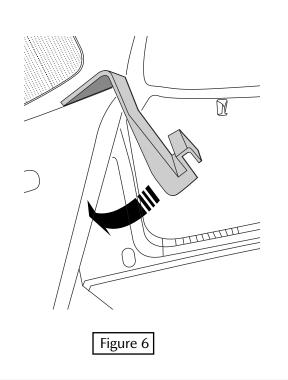

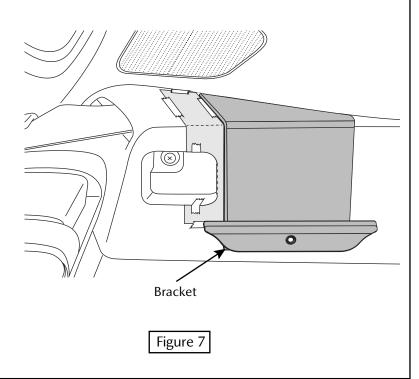


5. Apply Pressure to Cargo Storage Shelf Bracket:

- A. Using a rubber roller, starting from the center out, press down the perimeter of the part to ensure proper bond of adhesive. Use caution to ensure roller does not scratch the vehicle.
- **B.** Inspect for proper adhesion and placement. Verify the part is not loose at any corner.

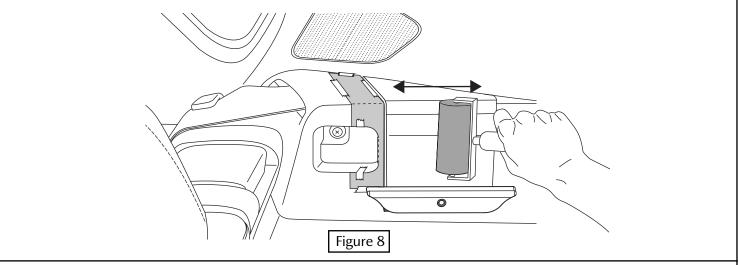

6. Remove the die cut templates and tape. Wipe the area to remove any marks or smudges.

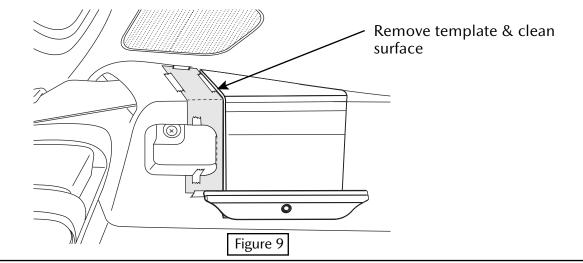

- 7. Position Cargo Storage Shelf onto the brackets.
 - A. Place Cargo Storage Shelf onto the brackets and line up the holes (unzip the top cover of the cargo storage shelf).
 - **B.** Screw in the Thumb Screws.

