

GENUINE CARGO NET

INSTALLATION AND USER'S INSTRUCTIONS

Thank you for purchasing a genuine Mazda accessory.



Before removal and installation, be sure to thoroughly read these instructions.


Please read the contents of this booklet in order to properly install and use the cargo net.


Your safety depends on it.

Keep these instructions with your vehicle records for future reference.

WARNING

- There are several  **WARNING** and  **CAUTION** sections in this booklet concerning safety when installing or removing the cargo net. Always read and follow them in order to prevent injuries, accidents, and possible damage to the vehicle.

 **WARNING:** Indicates a situation in which serious injury or death could result if the warning is ignored.

 **CAUTION:** Indicates a situation in which bodily injury or damage to the vehicle could result if the caution is ignored.

- For areas indicating the tightening torque in this instruction manual, tighten to the specified torque using a torque wrench. For areas in which the tightening torque is indicated inside parentheses (), the tightening torque is indicated as a reference value, however tightening using a torque wrench is not necessary.
- Do not modify the cargo net.
- Do not install the cargo net in any way other than described in the following instructions.
- If in any doubt, please ask your Mazda dealer to install the accessory in order to prevent errors in installation.
- If you have any questions about the use of the accessory, ask your Mazda dealer for proper advice before using it.
- Mazda and its suppliers are not responsible for injuries, accidents, and damage to persons and property that arise from the failure of the dealer or installer to follow these instructions.
- To ensure safety and reliability of the work, installation, removal and disposal work done by an Authorized Mazda Dealership is recommended.
- Be careful not to lose removed parts, and be sure that they are kept free from scratches, grease or other dirt.

PART NAME: CARGO NET
PART NUMBER: BCKNV0530
VEHICLE: MAZDA3 5-DOOR

NOTE

To the dealer

- Please turn over these instructions to the customer after installation.

To the customer

- Keep these instructions after installation. The instructions may be necessary for installing other optional parts or removal of this accessory.
- Should the vehicle or this accessory be resold, always leave these instructions with it for the next owner.



GENUINE ACCESSORIES
INSTALLATION INSTRUCTIONS

PART NUMBER:
BCKNV0530

CARGO NET

APPLICABLE MODELS:
2019 > MAZDA3 5-DOOR

PACKAGE CONTENTS

Cargo Net
Hardware Kit (Part Number TBD)
 T-Anchors: Qty 2
 Nylon Spacer: Qty 2
Installation Instructions
Inspection Sheet

SPARE PARTS (available separately)
Hardware Kit (Part Number TBD)

TOOLS REQUIRED

Trim Plug Removal Tool
Scissors
CenterPunch
Drill and Dill Bit

1 Installing Net

1. Open lift gate.
2. Locate the four mounting locations as indicated by the arrows (Fig. 1).

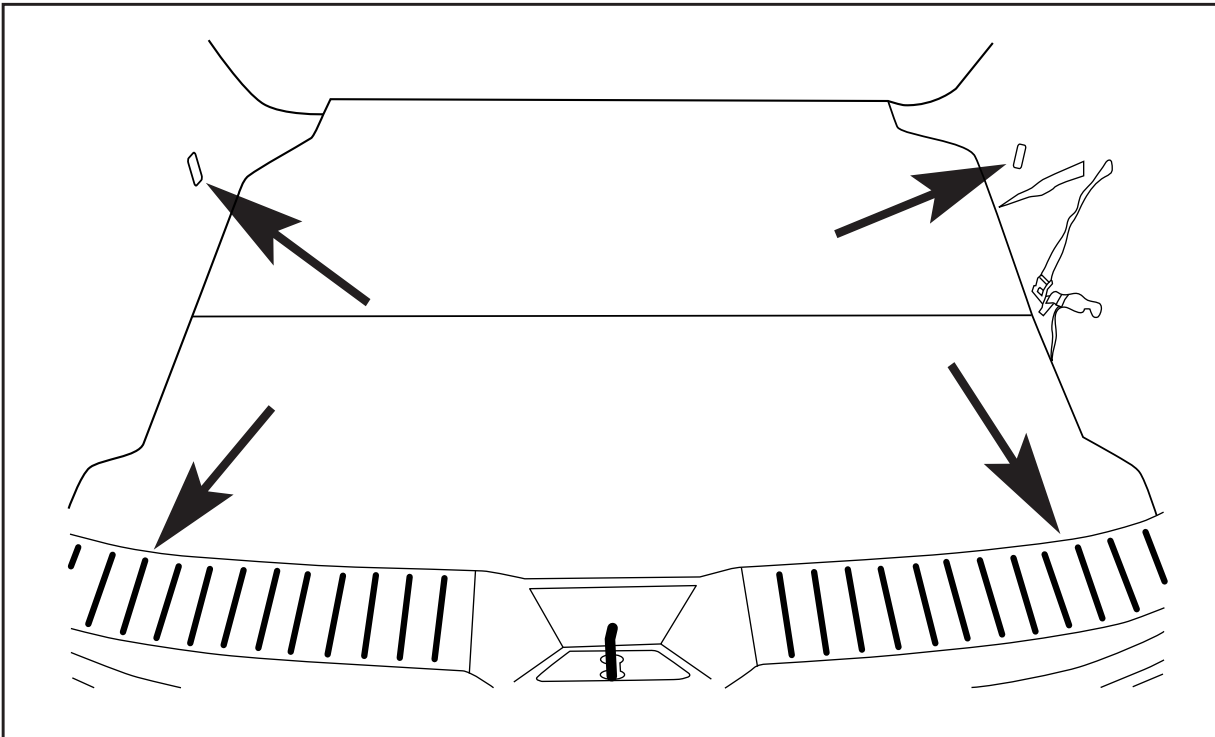


Fig. 1

2 Installing Net - (Cont.)

3. Remove plastic covers from both sides of the trunk (Fig. 2).
4. Lift the load floor cover (Fig. 3).

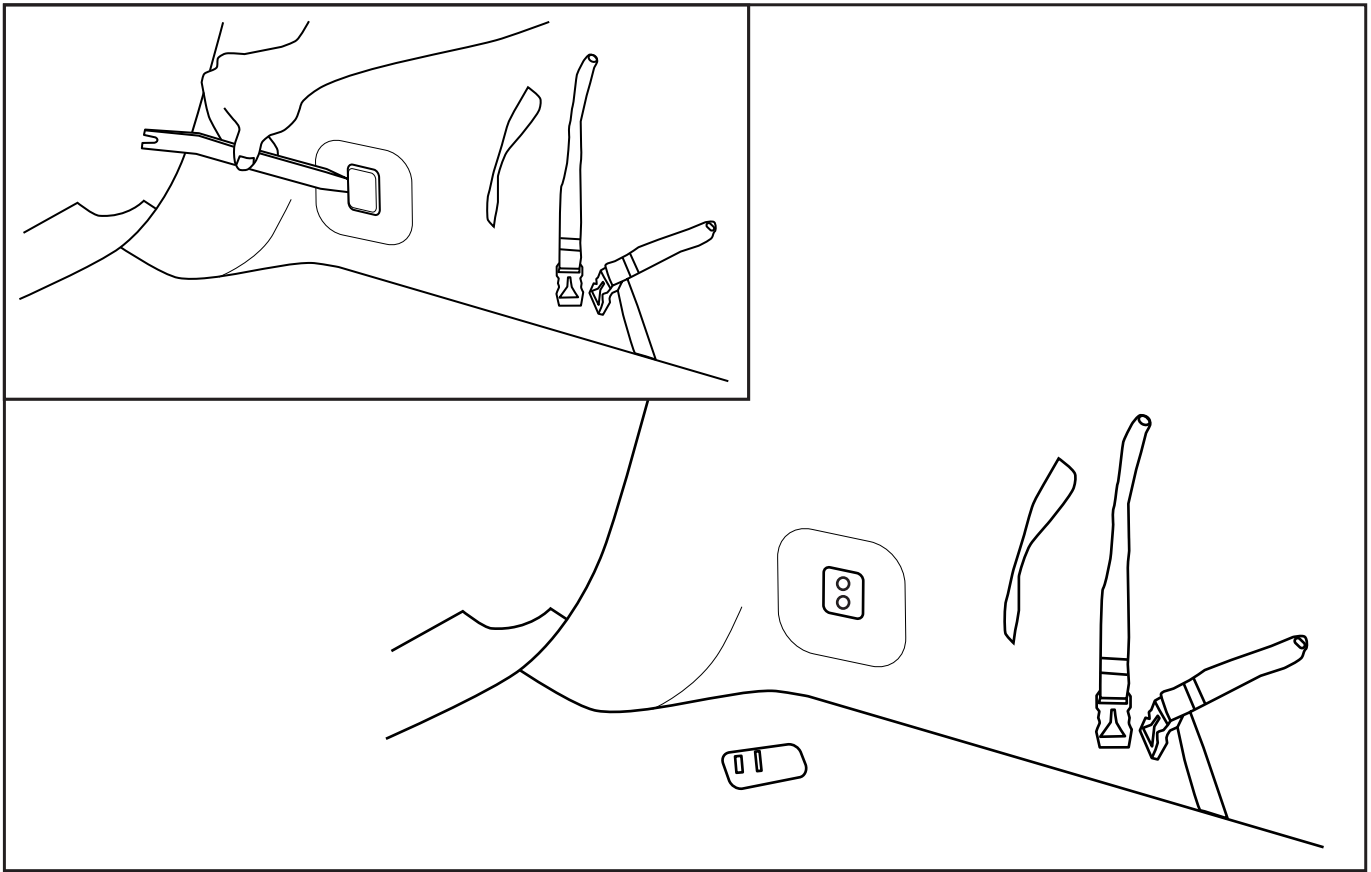


Fig. 2

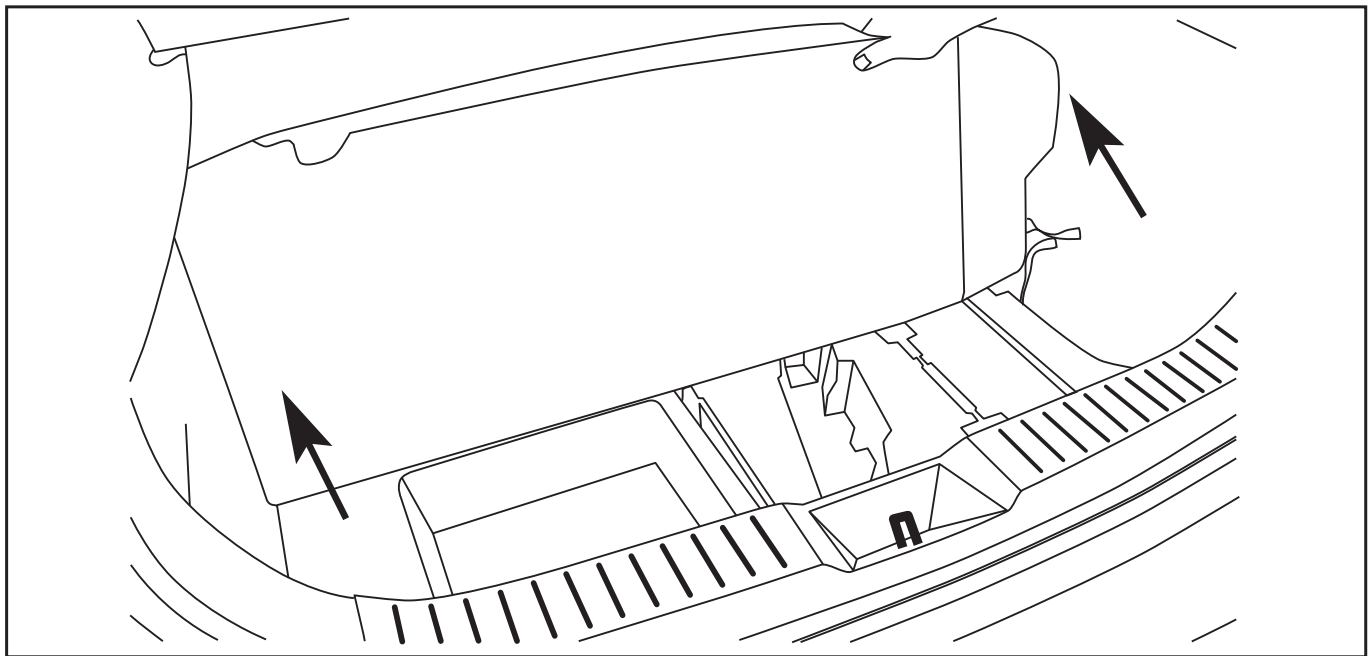


Fig. 3

2 Installing Net - (Cont.)

5. Carefully remove rear trunk trim cover (Fig. 4).
6. Cut out paper templates (Fig. 5).

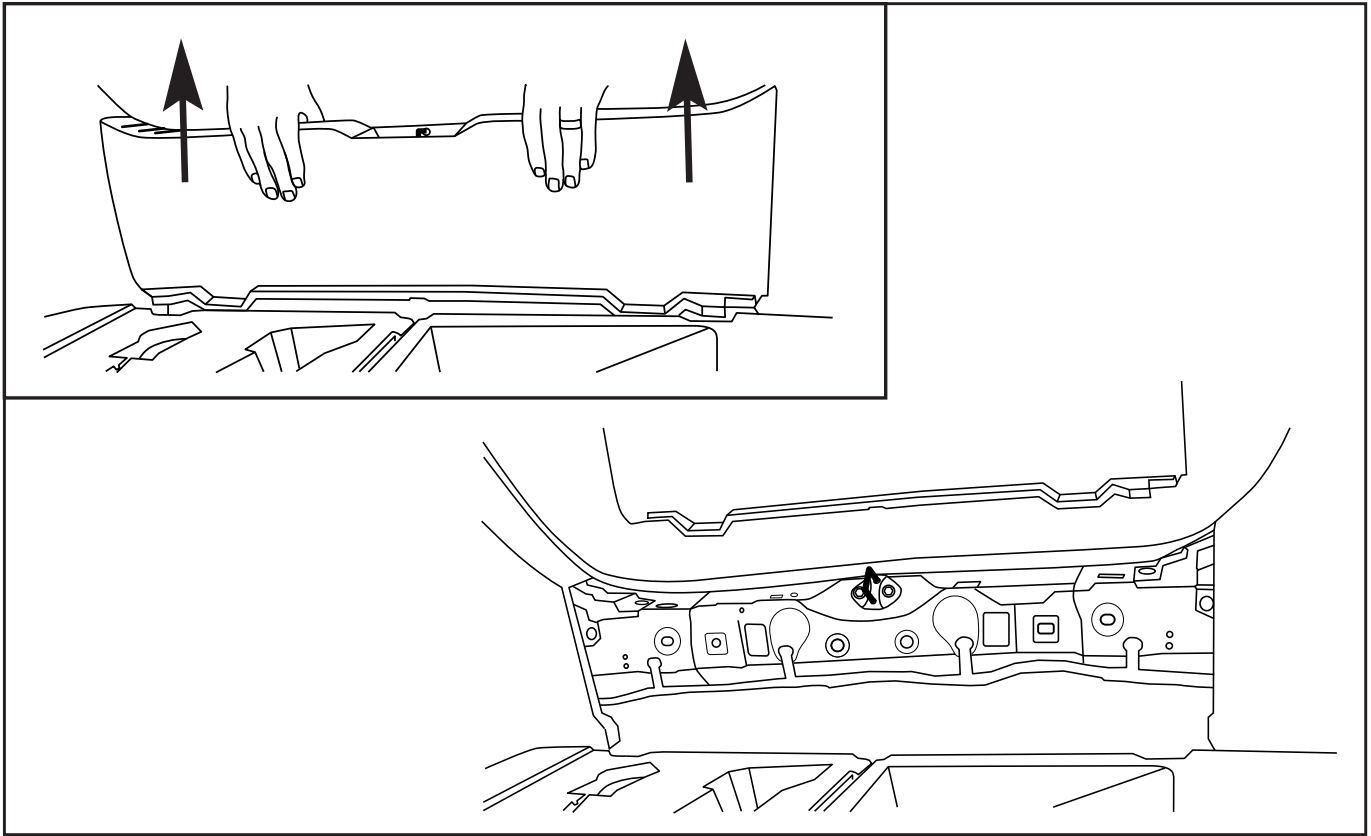


Fig. 4

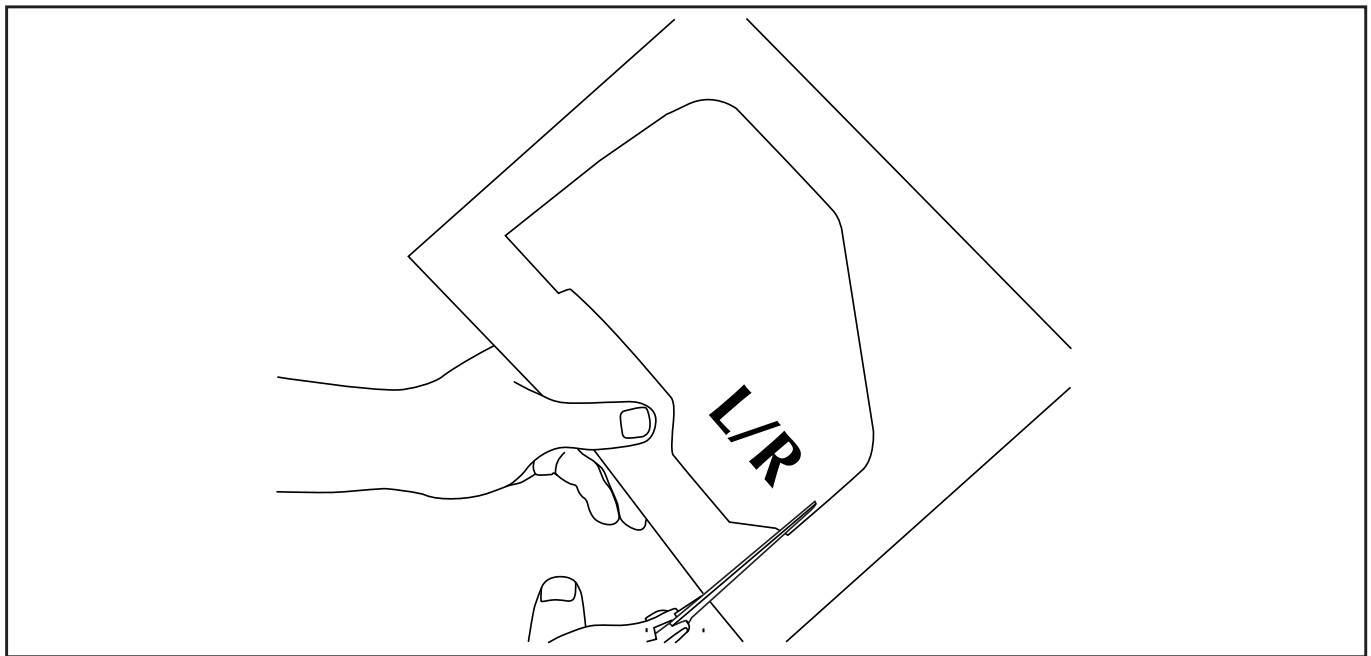


Fig. 5

2 Installing Net - (Cont.)

7. Align paper template to rear trunk trim cover and mark the center of the hardware locations (both sides) (Fig. 6).
8. Drill hardware installation holes into the rear trunk trim cover (both sides).
½ inch or 12mm (Fig. 7).

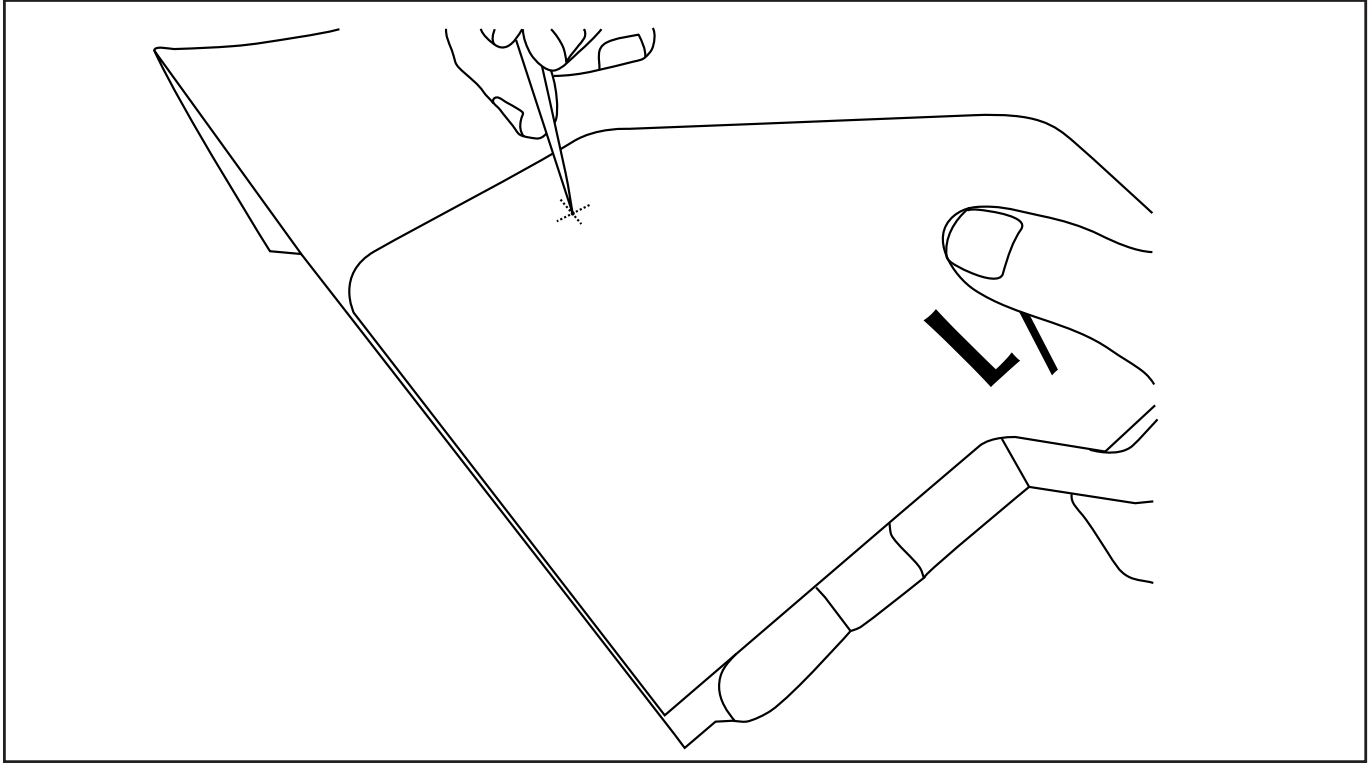


Fig. 6

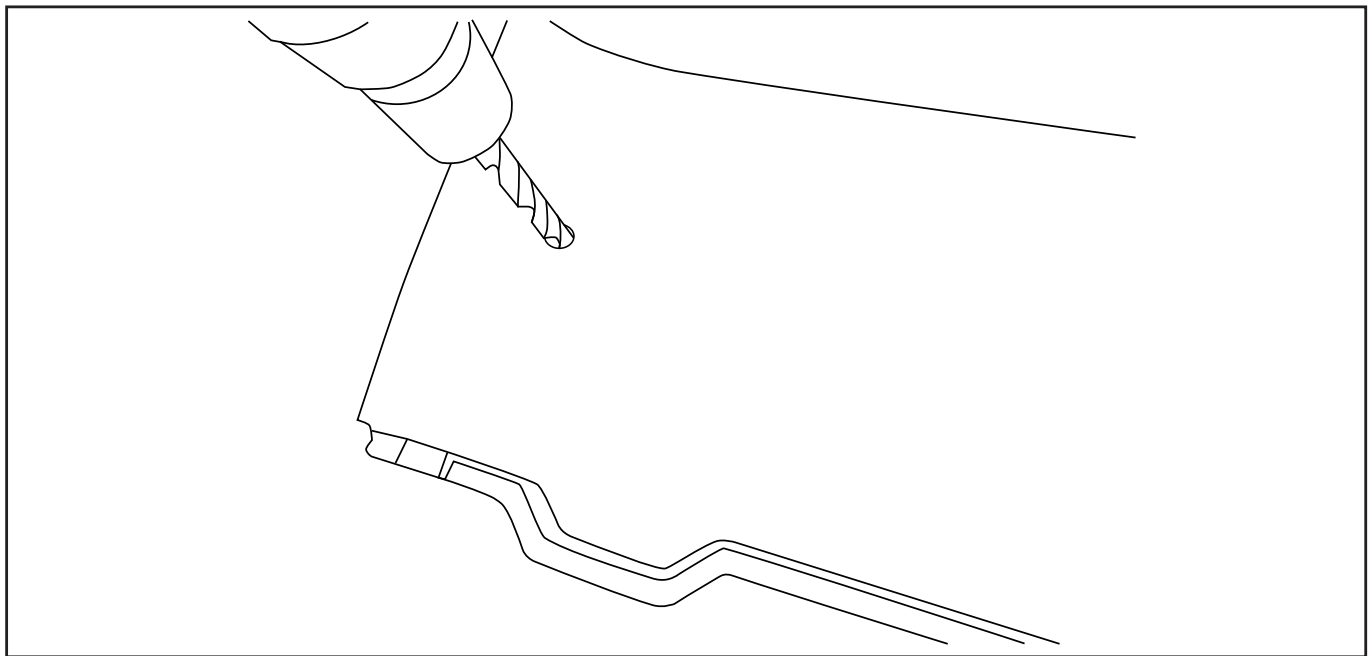


Fig. 7

2 Installing Net - (Cont.)

9. Reinstall rear trunk trim cover (Fig. 8).
10. Install hardware assemblies (both sides). Make sure T-anchors are positioned parallel to the load floor (Fig. 9).

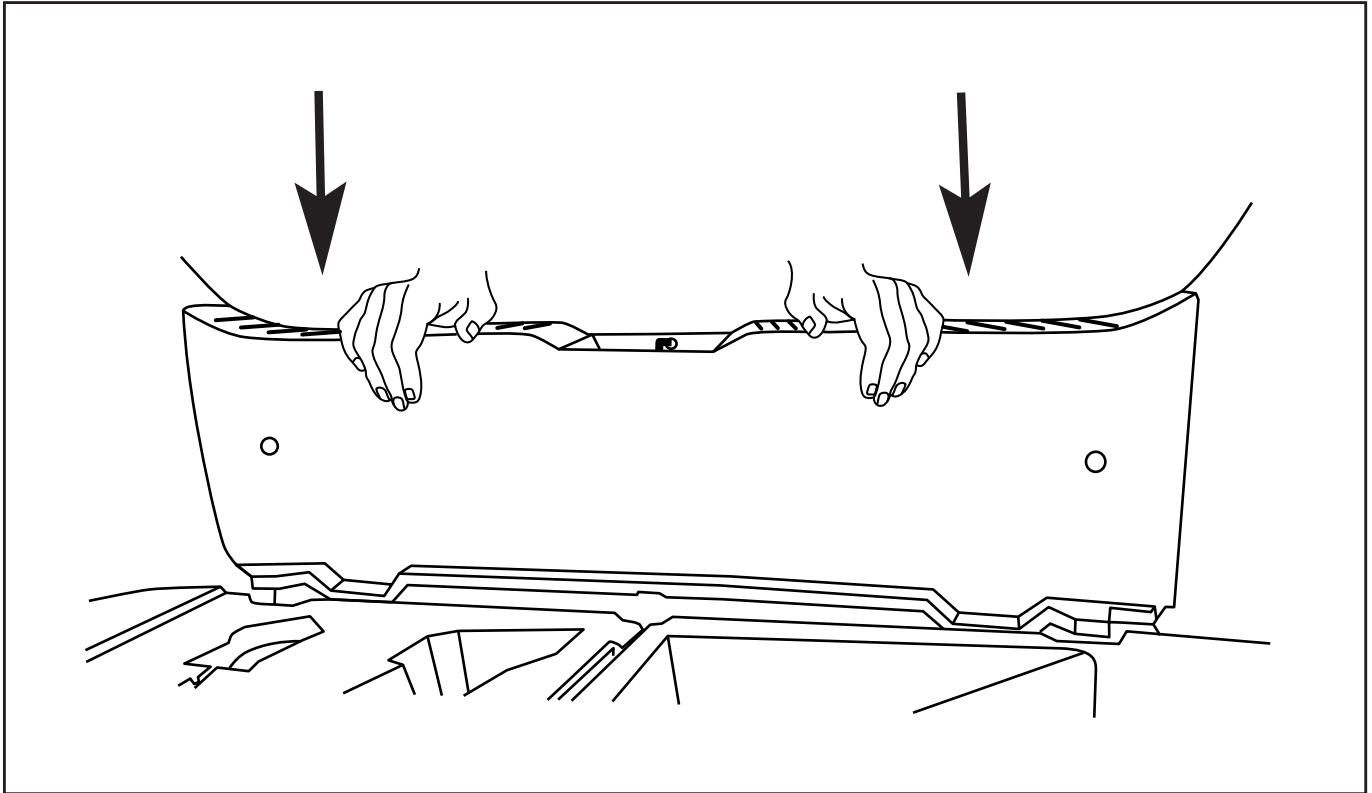


Fig. 8

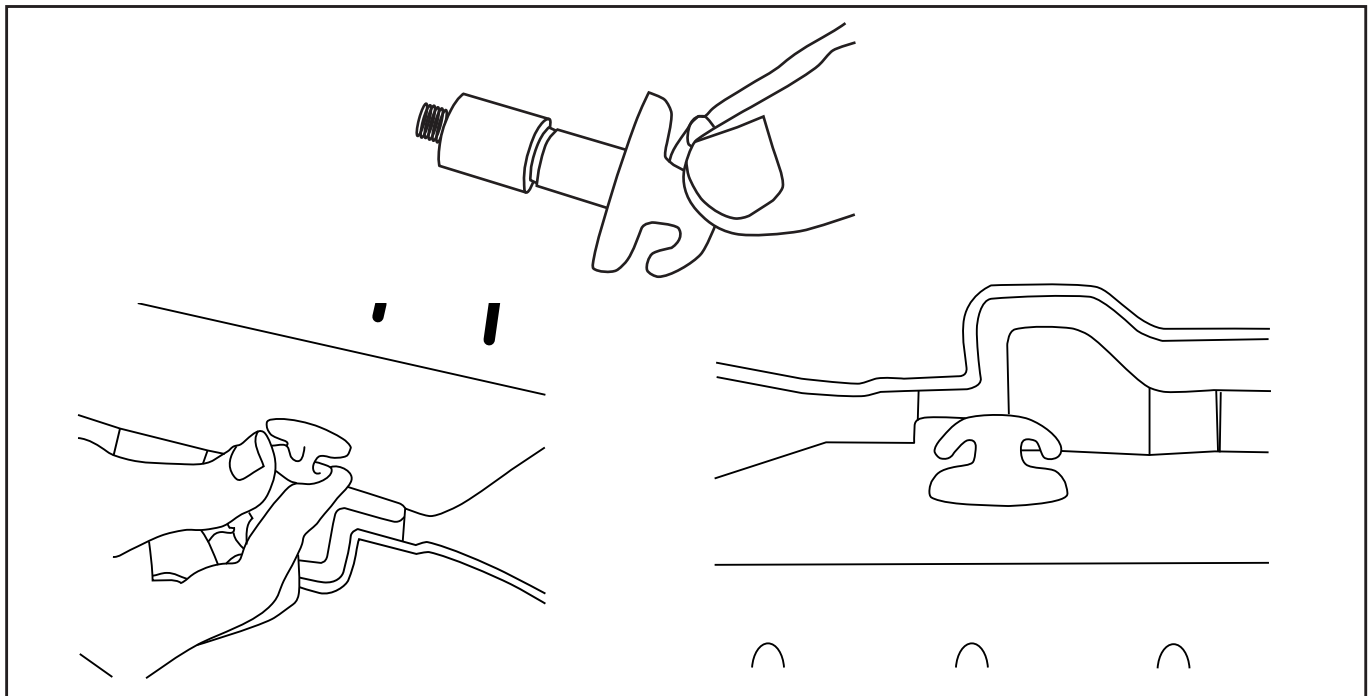


Fig. 9

2 Installing Net - (Cont.)

11. Reinstall load floor cover (Fig. 10).
12. Install D-rings (both sides) (Fig. 11).

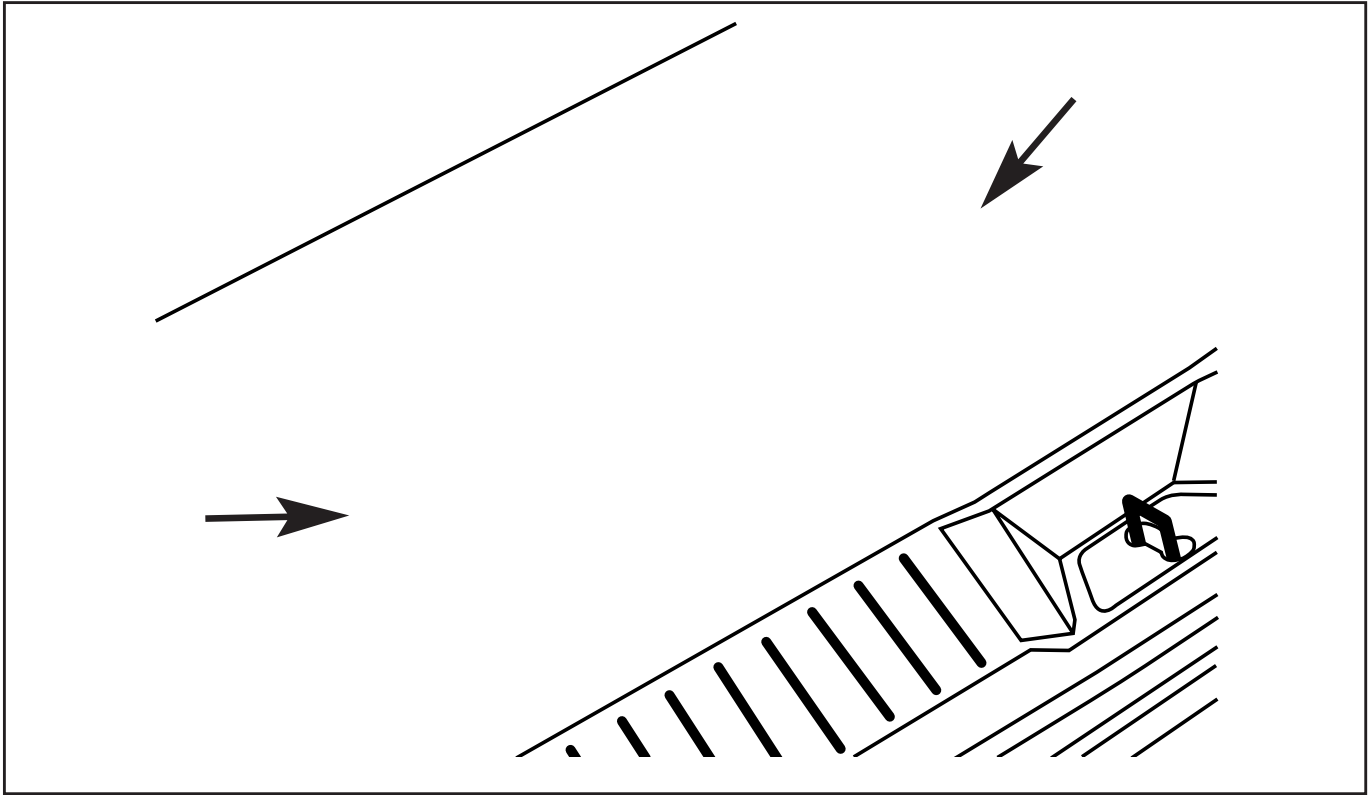


Fig. 10

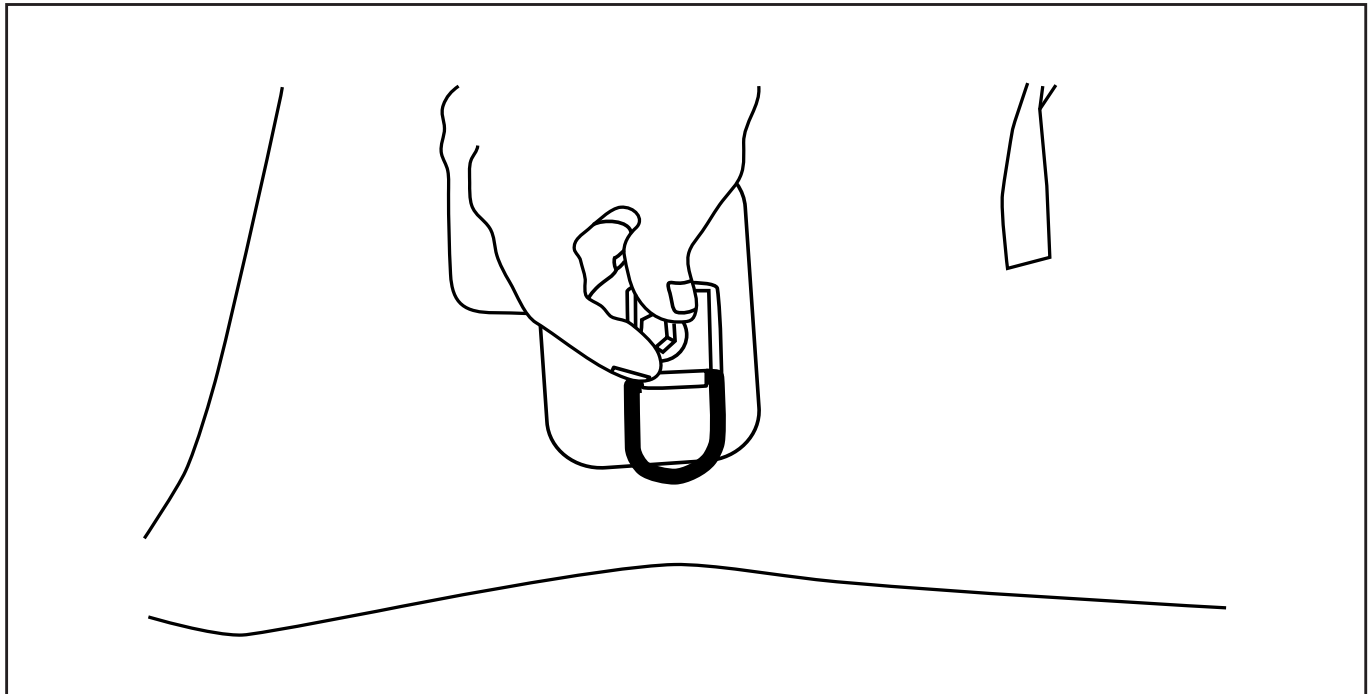


Fig. 11

2 Installing Net - (Cont.)

13. Attach net clips to D-rings (Fig. 12).

14. Attach net loops to T-anchors (Fig. 13).

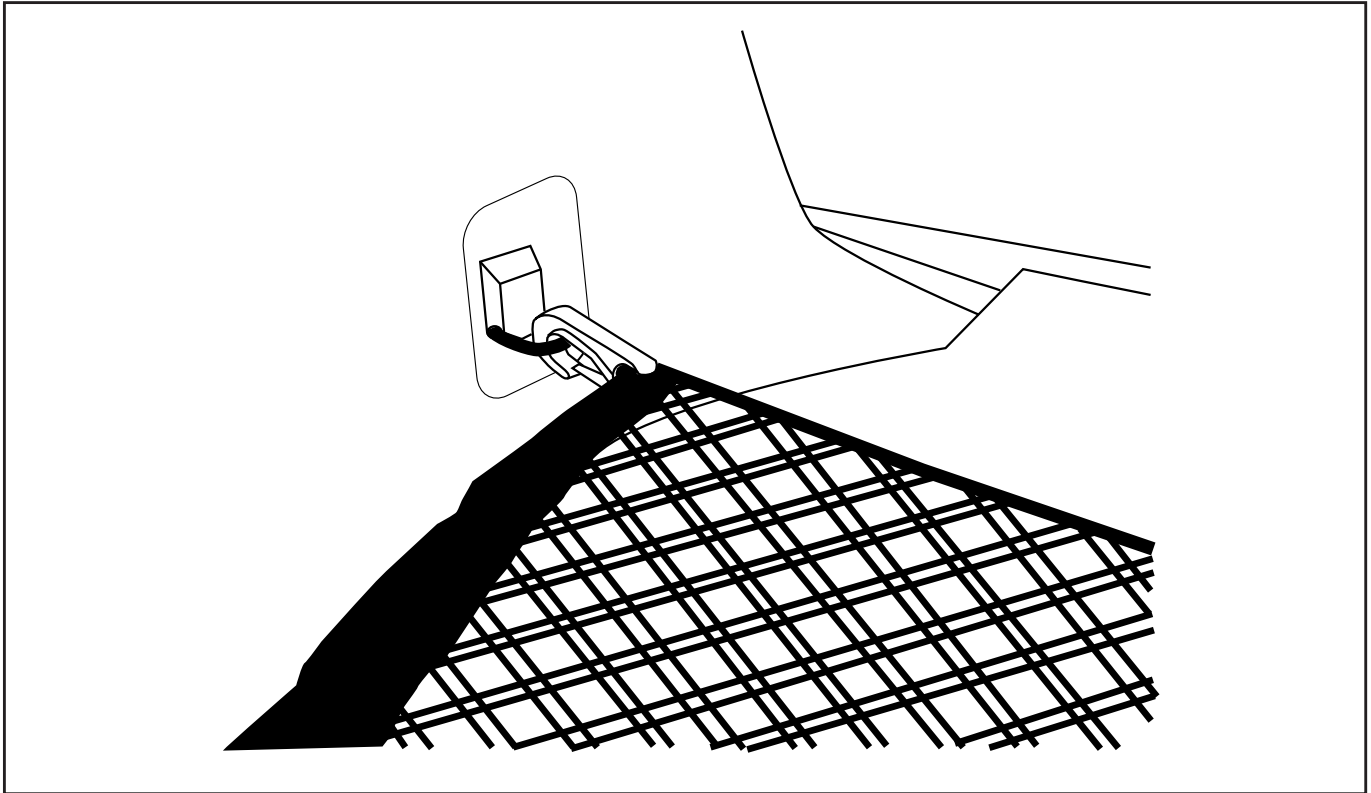


Fig. 12

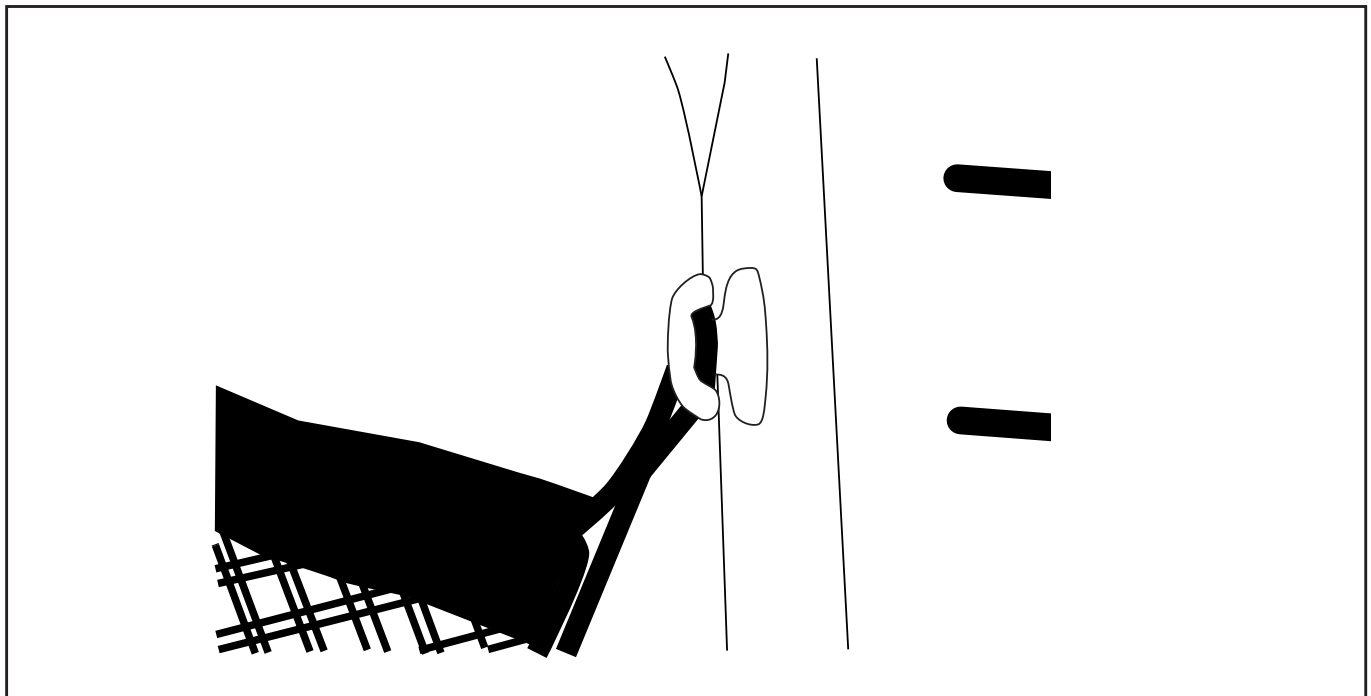


Fig. 13

2 Installing Net - (Cont.)

15. Re-seat weather stripping as needed (Fig. 14).
16. Mount the cargo net – pull tab should be on the top side of the net (Fig. 15).

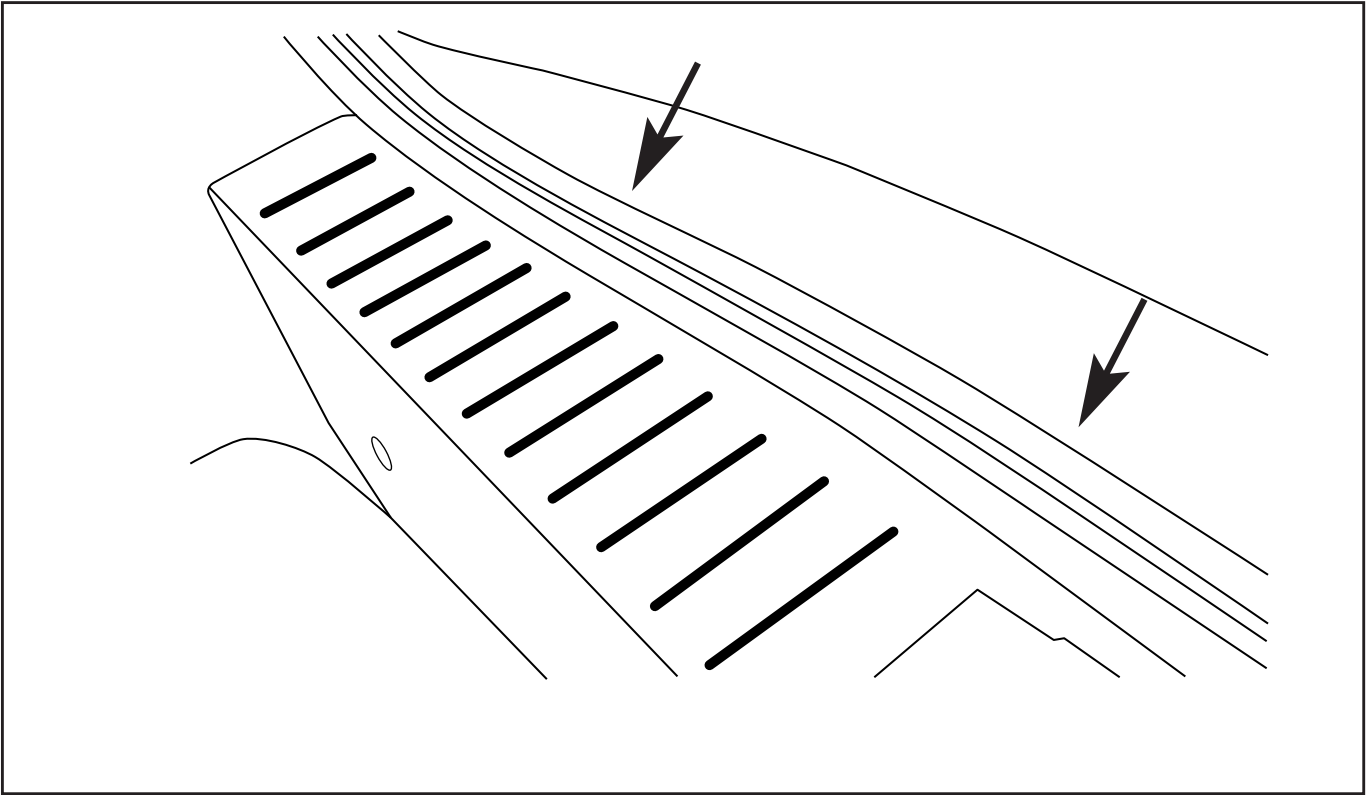


Fig. 14

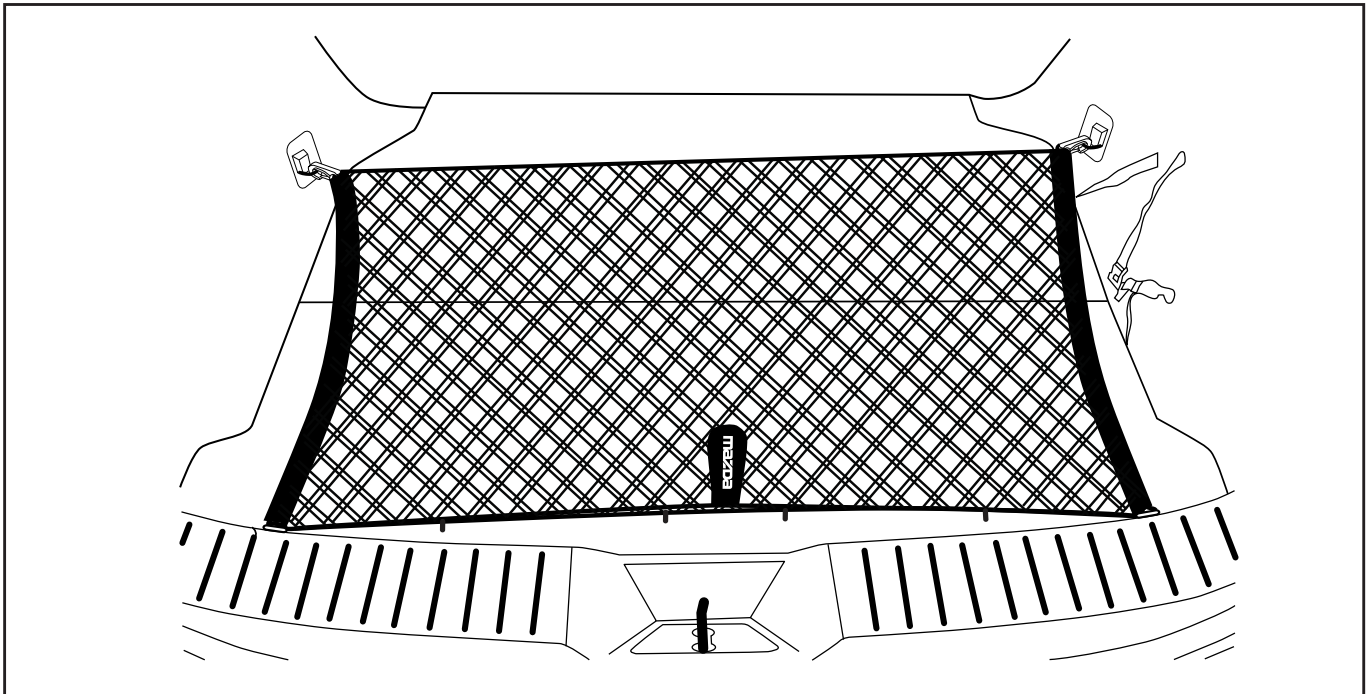


Fig. 15

3

Use of Net Clips

1. Locate the four hook clips located along the top of the cargo net (Fig.5).
2. Grasp the bungee cord adjacent to the hook clip and wrap two or three fingers around to hold it securely as shown (Fig.6).
3. With the same hand, use your index finger and thumb to hold the hook clip.
4. Grasp the bungee cord with the other hand and slide the cord to fasten it to the clip.
To unfasten, pull the bungee cord away out of the clip.

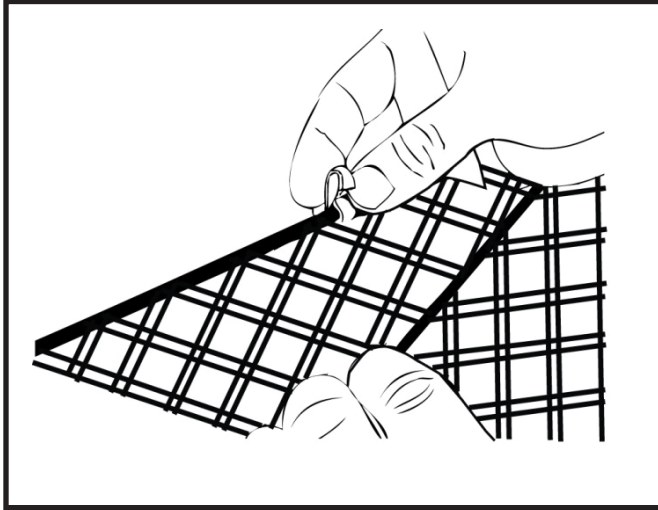


Fig. 5

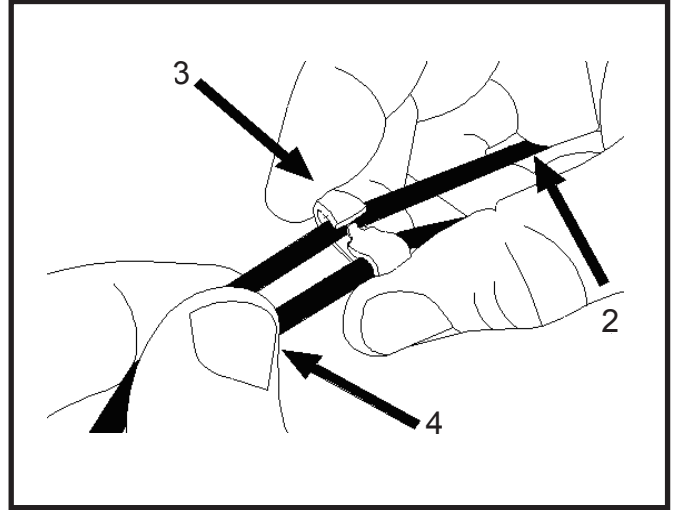


Fig. 6

4

Cleaning and Care

1. Hand wash using mild soap and warm water.
2. Do not machine wash.



WARNING: OBJECT(S) RESTRAINED NOT TO EXCEED 30 lbs. (13.6 kg)

CARGO NET INSPECTION SHEET

- Inspect the installed/reinstalled parts for the following items.
- Inspection parts differ depending on the vehicle body style.

MAZDA3 5HB

Inspection Parts	Inspection Items (●)			
	Clearance/Fit	Scratches/Debris	Installation/Tightening/Engagement	Operation Check
Luggage Tie Down Hook	●	●	●	●
Cargo Net	●		●	●
Net Clips			●	●
Trunk Sill Plate	●	●	●	

MAZDA3 4SD

Inspection Parts	Inspection Items (●)			
	Clearance/Fit	Scratches/Debris	Installation/Tightening/Engagement	Operation Check
Trunk Floor	●	●	●	
Trunk Sill Plate	●	●	●	
Left Side Trunk Trim	●	●	●	
Right Side Trunk Trim	●	●	●	
T-Anchors	●	●	●	●
Cargo Net	●		●	●
Net Clips			●	●

● = Applicable

Date				
Vehicle.				
VIN.				
Approved		Checked		Person in charge