

GENUINE ALUMINUM FOOTREST KIT

INSTALLATION AND USER'S INSTRUCTIONS



Thank you for purchasing a Genuine Mazda Accessory.


Before removal and installation, be sure to thoroughly read these instructions.


Please read the contents of this booklet to properly install and use the aluminum footrest. Your safety depends on it.

Keep these instructions with your vehicle records for future reference.



- There are several  **WARNING** and  **CAUTION** sections in this booklet concerning safety when installing or removing the aluminum footrest. Always read and follow the instructions in order to prevent injuries, accidents, and possible damage to the vehicle.

 **WARNING:** Indicates a situation in which serious injury or death could result if the warning is ignored.

 **CAUTION:** Indicates a situation in which bodily injury or damage to the vehicle could result if the caution is ignored.

- For areas indicating the tightening torque in this instruction manual, tighten to the specified torque using a torque wrench. For areas in which the tightening torque is indicated inside parentheses (), the tightening torque is indicated as a reference value, however tightening using a torque wrench is not necessary
- Do not modify the aluminum footrest.
- Do not install the aluminum footrest in any way other than described in the following instructions.
- If in doubt, please contact your Mazda dealer to install the accessory in order to prevent errors in installation.
- If you have any questions about the use of the accessory, ask your Mazda dealer for proper advice before using it.
- Mazda and its suppliers are not responsible for injuries, accidents, and damage to persons and property that arise from the failure of the dealer or installer to follow these instructions.
- To ensure safety and reliability of the work, installation, removal and disposal work must be carried out by an Authorized Mazda Dealership.
- Be careful not to lose removed parts, and be sure that they are kept free of dirt, scratches, or damage.

PART NAME: ALUMINUM FOOTREST KIT

PART NUMBER: NA1J V9 095 NA1P V9 095

NA1V V9 095 NA6R V9 095

VEHICLE: MAZDA MX-5


To the dealer

- Please give these instructions to the customer after installation.

To the customer

- Keep these instructions after installation. The instructions may be necessary for installing other optional parts or removal of this accessory.
- Should the vehicle or this accessory be resold, always give these instructions to the next owner.

1 .INSTALLATION VIEW

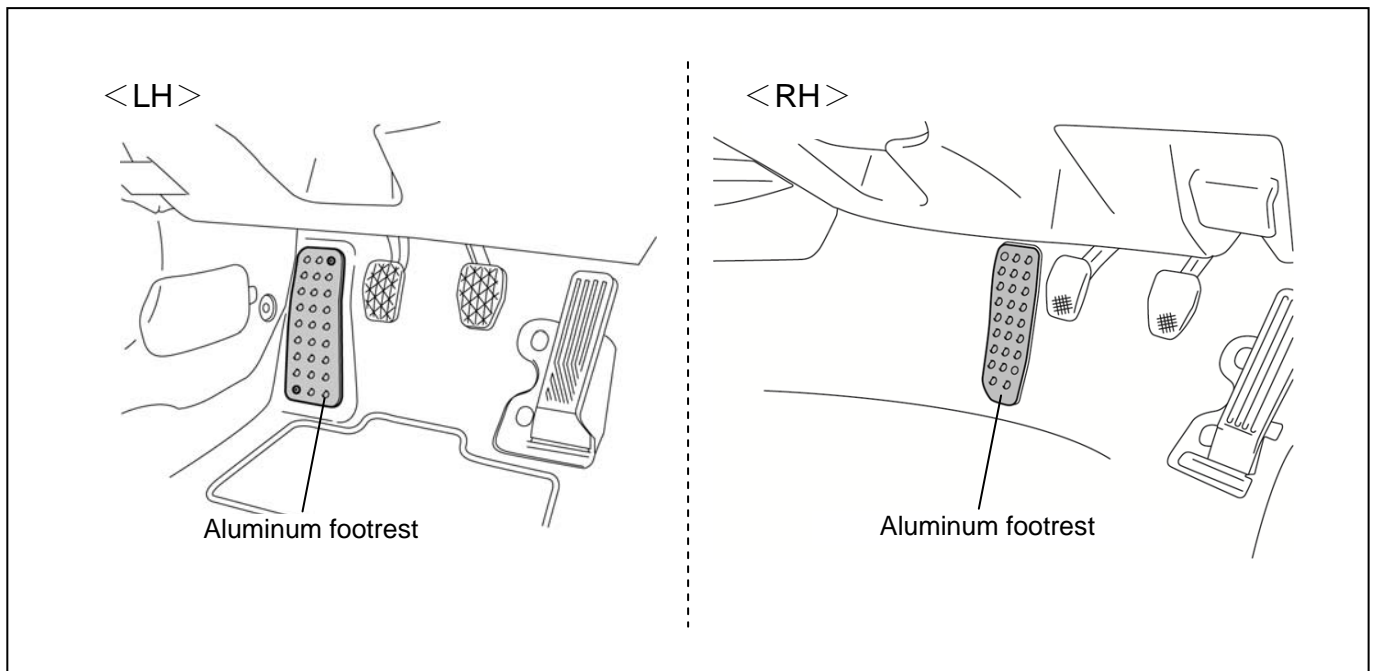





2 . PARTS

- Before installation, verify that the kit includes all the following parts and that they are free of dirt, scratches, or damage.





NA1P V9 095

NA1J V9 095

Part	Part name	Qty	Part	Part name	Qty
	Aluminum footrest	1		Nut plate	1
	Screw	2		Installation and user's instructions	1

NA1V V9 095

NA6R V9 095

Part	Part name	Qty	Part	Part name	Qty
	Aluminum footrest	1		Nut plate	1
	Screw	2		Installation and user's instructions	1

3. VERIFICATION ITEMS BEFORE INSTALLATION

Required tools

☆Phillips screwdriver

☆Torque wrench

☆Drill (2.5 mm, 6 mm)






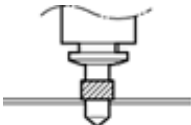
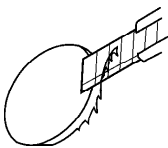
☆Utility knife

⚠ WARNING

Before performing any work, park the vehicle on level ground, apply the parking brake securely, and then block the wheels. If the vehicle moves while performing work, it may cause injury.



⚠ CAUTION

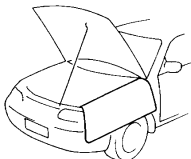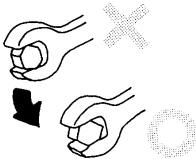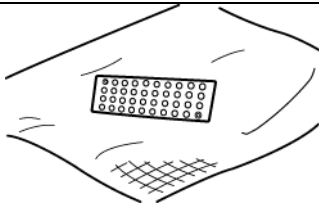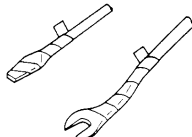Use masking tape or a protector to prevent scratches when removing/installing parts.	Use the most appropriate (size, use) tool for each task and perform the work correctly. (Otherwise) the parts may be damaged.	Place the removed parts and kit accessories on a protective sheet to prevent scratches.	Wrap protective tape around screwdrivers and fastener remover tools to prevent scratching the vehicle.
			
When drilling the body using a drill or hole saw, use a protective sheet or tape to prevent drill shavings from penetrating the vehicle. Otherwise, it may cause abnormal noise or rust.	When drilling the body using a drill or hole saw, always wrap with duct tape to prevent scratching and over-drilling.	After drilling holes, remove burrs completely.	
			


ADVICE

Refer to the Workshop Manual for removal and installation of applicable vehicle parts.



4. VEHICLE PARTS REMOVAL


[RHD]

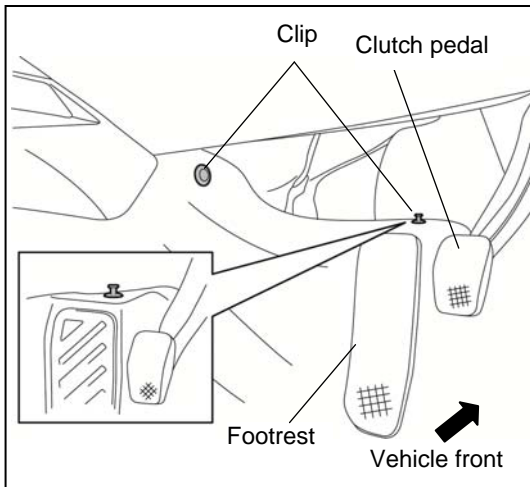

Clip removal

1. Remove the clip shown in the figure.


[LHD]

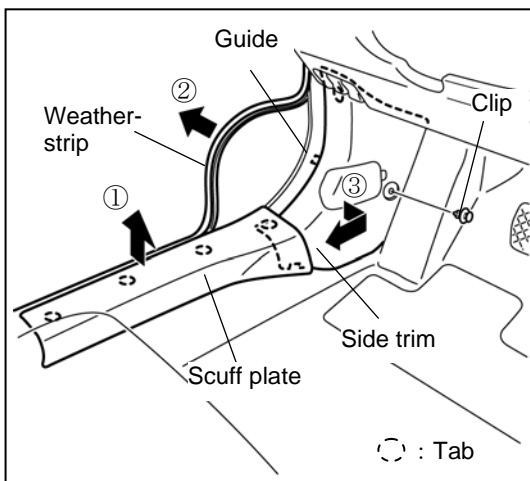

Scuff plate, weatherstrip, and side trim removal

1. Remove in the order indicated in the figure.


- ① Scuff plate
- ② Weatherstrip
- ③ Side trim

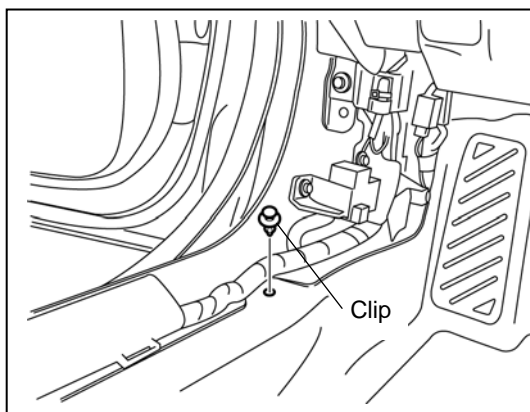

2. Remove the clip shown in the figure.



5. ALUMINUM FOOTREST INSTALLATION

【RHD】

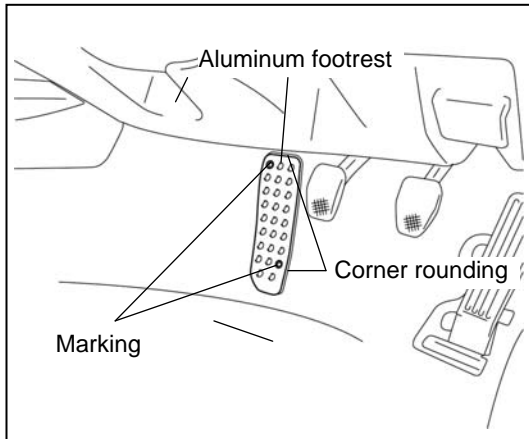

1. Temporarily place the aluminum footrest using the corner roundings of the footrest as a reference as shown in the figure.
2. Mark the two locations using screw holes.

【LHD】

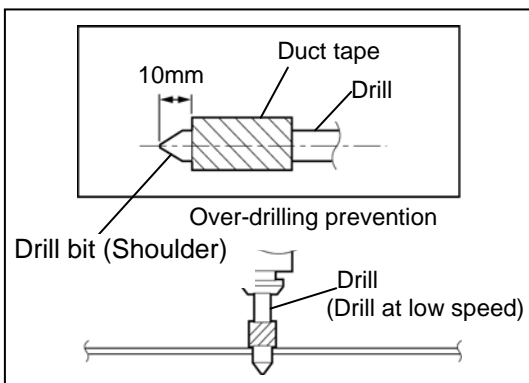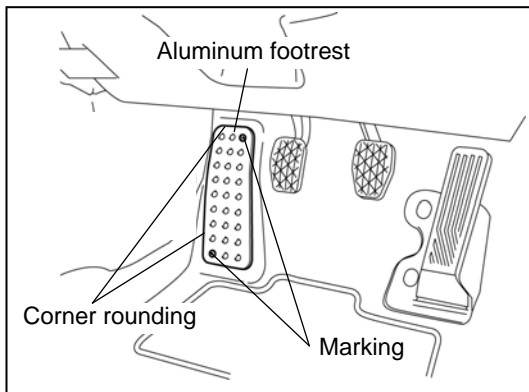


3. Remove the aluminum footrest.
4. Wrap the drill bit with duct tape as shown in the figure.
5. Set the drill speed to low.


ADVICE

- Always use a drill with a rotation speed adjustment.
- Be careful when handling drill bits.
- When drilling the holes, be careful not to drill so deeply that it reaches sponge part underneath.


6. With the drill bit pointed perpendicular to the footrest, drill holes in the marked positions in stages.
Hole drilling: $\phi 2.5 \rightarrow \phi 6$

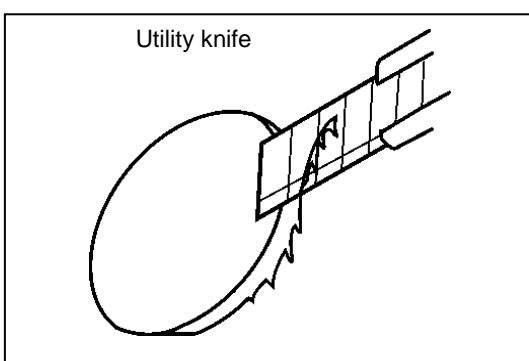

7. Be sure to completely remove any carpet fraying around a drilled hole.

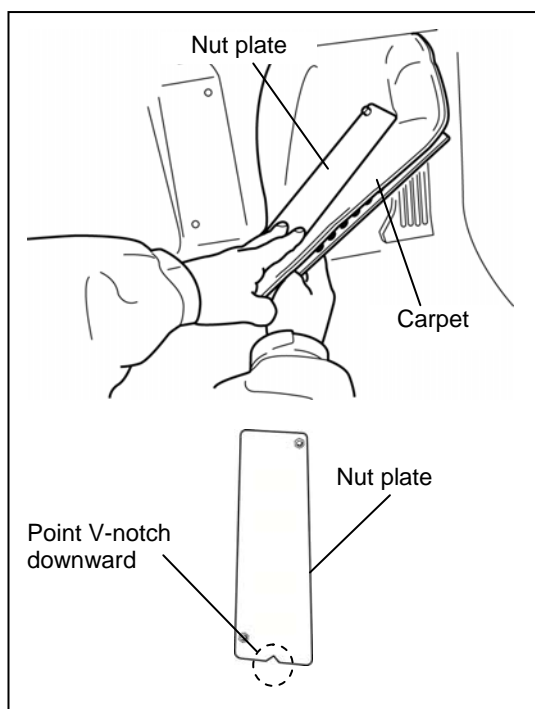

8. Partially pull back the carpet and install the nut plate to the backside of the aluminum footrest installation area. At this time, point the V-notch of the nut plate downward.

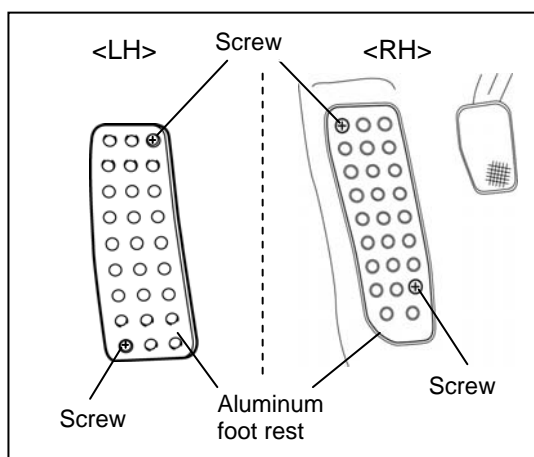

9. Apply thread sealer to the screw (2) ends.
10. Install the aluminum footrest to the nut plate using screws (2).

Screw tightening torque: 1.0-1.4 Nm

11. Install the side wall in the reverse order of removal.

-TO THE CUSTOMER-

- Please be careful of the following points for taking care of this product.
 1. Please do not use hard tools, such as brush when you wash this. It may damage the surface.
 2. Please wash the product with water after using thinned neutral detergent, when it is hard to clean off by washing without soap.